




TPO Line Set Protection Installation Guide

Permanent or Removable Application

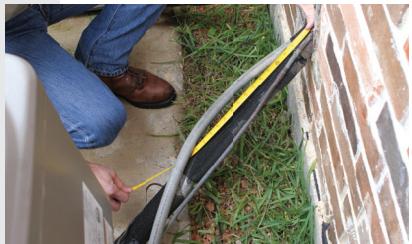

Step 1: Measure

Measure the circumference of the line set insulation (measurement around the insulation or the diameter times 3.14), adding at least $\frac{1}{2}$ " to the end for an overlap.



Step 2: Cut/Score

Cut the TPO Line Set Wrap to the desired length using scissors. Use the provided scoring tool and make a slit at the edge of the extra material for the overlap.



Step 3: Peel

Two options:

Fully Adhered

- Remove all of the clear release liner except for the overlap.

Not Adhered (For Title 24 Compliance*)

- Keep the release liner in place



Step 4: Roll

Roll the insulation longitudinally along the TPO Line Set Wrap, making sure to evenly apply pressure along the length of the insulation.



Step 5: Wrap

Wrap the lined insulation around the line set tubing. Starting at the very edge of the copper, begin peeling away the overlapping release liner (small sections at a time) and applying firmly to the top of the other end of the insulation to create an immediate leak-proof seal. The overlap of TPO shall be firmly adhered to the substrate without openings or fishmouths.

**Keeping the release liner in place and only utilizing the adhesive on the overlap allows for the removal of the facer for maintenance purposes without damaging the insulation.*



USA: 900 Hensley Lane, Wylie, TX 75098 • (877) 495-4822

Canada: 205 Brunswick Boulevard, Suite 300, Pointe-Claire, QC H9R 1A5 • (800) 544-5535

www.hardcast.com

